
INSTRUCTIONS FOR Memory Pac Blisters & Cards

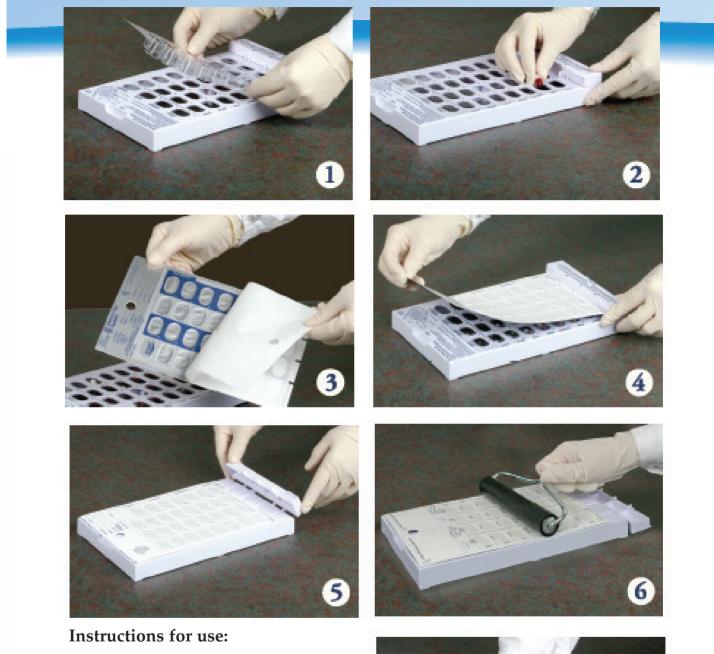

- 1. Place blisters in tray, aligning the bottom notches.
- 2. Fill blister with medication as ordered
- 3. Remove protective liner from face of card to expose adhesive surface.
- 4. Place the card in the tray adhesive side down, aligning the bottom notches.
- 5. Flip-open the bottom portion of the hinged tray.
- 6. Firmly apply pressure using a roller over the entire card to create a grade "B" seal.
- Remove the card from the tray and apply labels as required.

