


INSTRUCTIONS FOR


SureMed™ Multimed Packs (#19838)




Step 1. Peel the paper backing from the card exposing the adhesive.

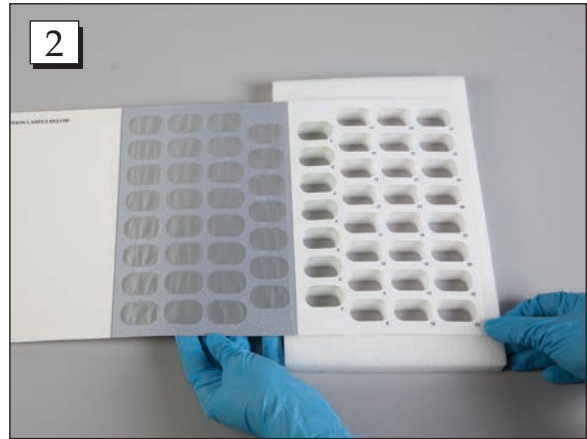


Step 2. Align the holes in the front of the card with the holes in the filling tray.

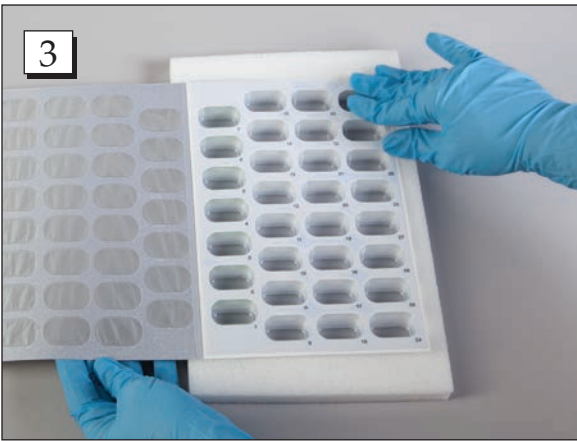

Step 3. Place the blister tray into the sealing tray.

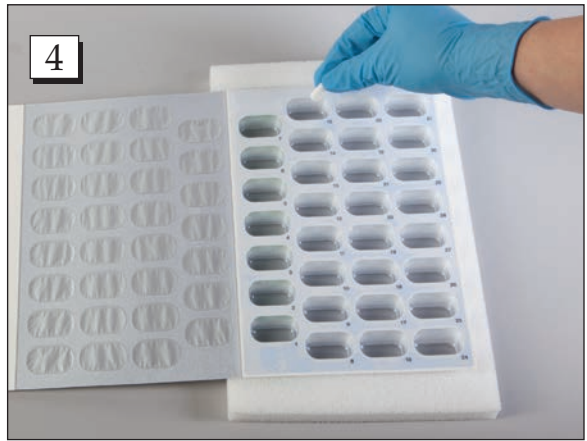

Step 4. Fill each blister with meds.

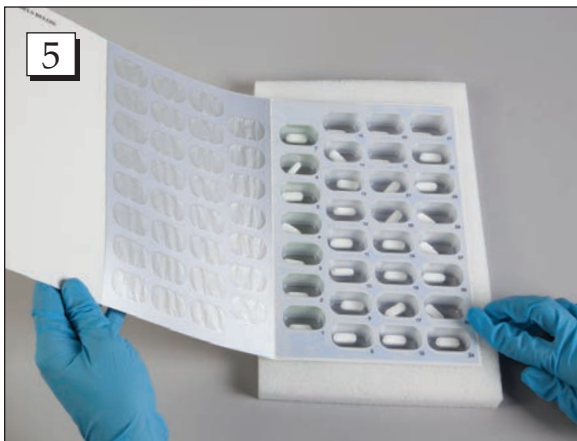

Step 5. Fold the card backing over, bringing it into position to seal the blister tray.



Step 6. Press the back firmly into place with your hand or roller to ensure a good seal.