


INSTRUCTIONS FOR Applying Labels to Blisters using the Foam Sealing Tray



Step 1. Prepare the labels that will be applied to the blisters with the pertinent information, such as name of drug, expiration date, lot number, etc.

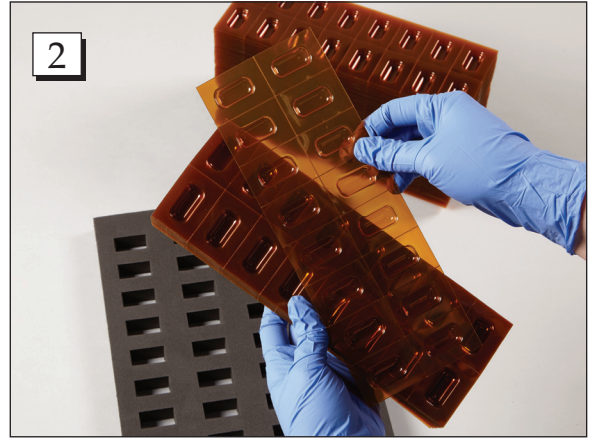

Step 2. Remove a sheet of two blister strips from the blister stack.



Step 3. Tear the sheet into two individual blister strips and place them in the tray. Repeat steps 2 & 3 for two more blister strips.



Step 4. Fill each blister cavity with a tablet or capsule.



Step 5. Peel a strip of labels from the 8½" x 11" sheet of laser labels.



Step 6. Holding the label strip by the edges on either end, apply the label strip to a row of blisters in the sealing tray by matching the notches on the labels with the edges of the blisters.

INSTRUCTIONS FOR Applying Labels to Blisters using the Foam Sealing Tray



Step 7. Gently press the labels onto the blisters.



Step 8. Enhance the seal by applying moderate pressure to the sealed blister strips using a sealing roller.



Step 9. Remove the strips from the sealing tray.



Step 10. Each blister can be torn from its strip and stored or dispensed to the patients.

