



INSTRUCTIONS FOR Ointment Blisters (#19339 & 19610-19612)

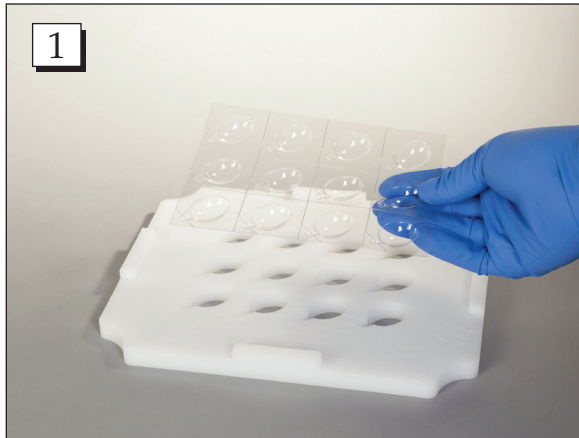


Step 1. To begin, remove a single blister tray from the stack and place it on top of the filling tray. If there are any detached blisters, place them in the missing areas on the fill tray.

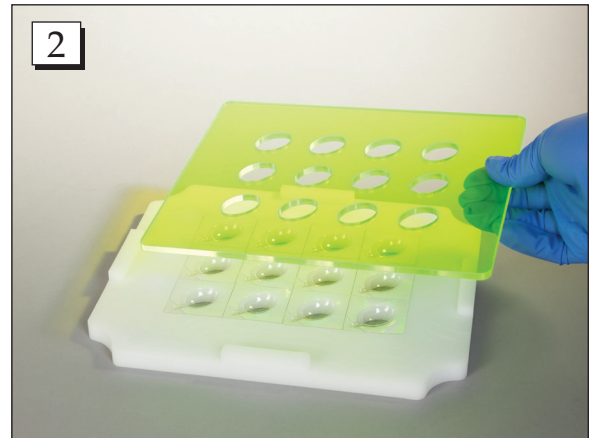

Step 2. Next, place the overlay on top of the blisters to prevent ointment from getting on the edge.




Step 3. Using a syringe pre-filled with ointment, fill each blister to about 65% capacity. We recommend placing the tip of the syringe against the bottom of the blister then slowly making a swirl pattern while moving the syringe upwards. This helps evenly dispense ointment and prevent splatter.

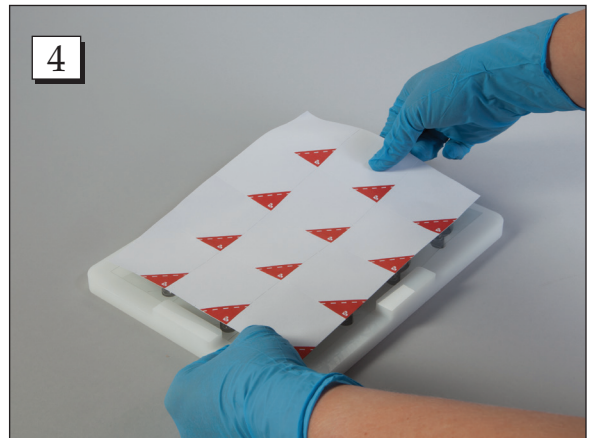

Step 4. First, remove the overlay from the blisters. Then peel the backing from the sheet of labels and match the notch markers on the labels with those on the blisters. Align the edges of the sheet with the edges of the blister tray and apply.

INSTRUCTIONS FOR Ointment Blisters (#19339 & 19610-19612)

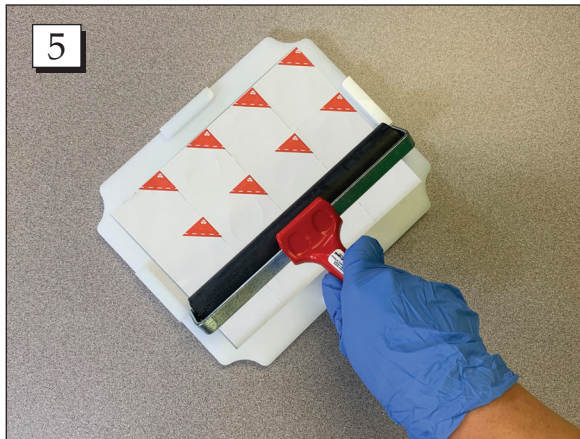

Step 5. With labels in place, roll over them several times with the roller to seal them to the blister.



Step 6. Once the process is complete, ointment blisters are ready for distribution.

Note: It's important to note that the filling process is the same if you have the Foam Sealing Tray for Ointment Blisters instead of the Ointment Blister Filler / Sealing Tray — just disregard any instruction using the overlay. If you would like additional assistance using the Ointment Blister System, contact us through live chat or call us at the number on the screen and one of our trained product specialists will be happy to help!

